

ZA 3510 ships with a standard battery pack BAT 8207. Please order these battery packs and replace with these battery packs.



Step 1


- Make sure that the serial number and logo are facing the right way up.
- Then turn the tracker face down.
- Unscrew the 6 screws.

Tip: If using a power drill, use power setting 7, on low. (Note: not all power drills have the same settings!)



Step 2

Remove the back plate and the 6 screws.

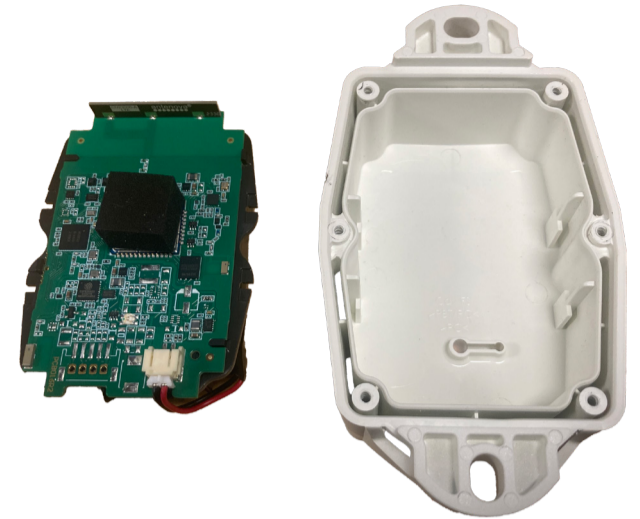

Step 3

Take the battery and PCB module out of the casing.




Step 4

Separate the battery pack from the PCB and line them up next to each other.



Step 5

Disconnect the battery pack from the PCB. Be careful in disconnecting the battery pack.

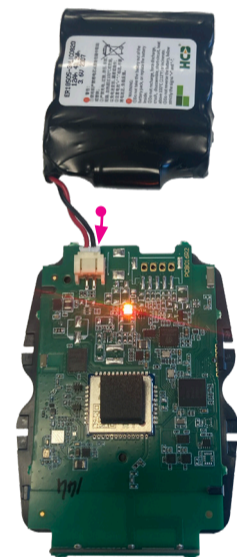

Step 6

Connect the new battery pack to the PCB, a red LED will blink for a few seconds.




Step 7

Align the battery on the back of the PCB. Use the plastic battery holder for aligning the battery.



Step 8

Place the battery and PCB pack back in the tracker. Do not use force. There is only one way to put the module back in the tracker.

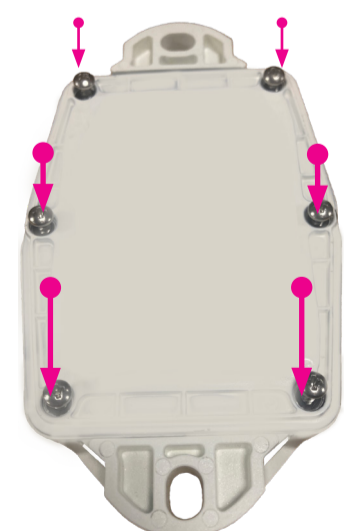

Step 9

Close the tracker carefully. Your tracker is ready to use again.

Indicate battery replaced in platform

SYSTEM

← Container 1234 View

Tracker info | Configuration | Subscription | **Battery** | Diagnostic More

Battery status

19%

Status OK

Battery is estimated to last till **January 2029** (still 60 months remaining).

Battery consumption started on 22 January 2022
Intended battery life is set to **7 years** (at least till 2 Feb 2029).

[Replace battery](#) | [Mark empty](#) | [Reset intended battery life](#) | [Recalculate](#)

When you replaced the battery in the tracker you have to indicate that in the platform.

- Go to the infrastructure section in the admin menu.
- Choose the zone anchor for which you wish to replace the batteries.
- Go to the battery tab
- Click replace battery
- Confirm by clicking **replace**

Replace battery ×

Do you want to replace the battery? It will reset all battery information.

Replace Cancel