


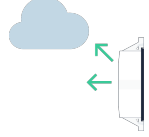


Tracker installation

RTPs can come in a variety of shapes and sizes. This manual contains the general guidelines for the installation of trackers on RTPs. We use a fairly generic RTP form factor for this.

| | | | |
|---|---|---|---|
|  |  |  |  |
| <p>Make sure the tracker is not fully surrounded by metal parts, as this blocks the signal.</p> | <p>Protect the tracker by using the cooler unit's shape if possible.</p> | <p>Place the tracker as high as possible on the asset.</p> | <p>Ensure the tracker has a clear view of the sky.</p> |

| Do's | Don'ts |
|--|--|
| Install the tracker as high as possible | On moving parts (lids, doors) |
| Vertical installation if possible | Close to forklift pick up holes |
| Clear view on the sky | Under the RTP (bad signal) |
| Use asset's cavities to install the tracker | On the very outside where the tracker might get hit by other equipment |
| Preferably use bolts and nuts to install the tracker | |

