


## Mounting the sensor

All mounting options for your sensor can be found in the [Sensolus product mounting instructions](#).

## Sensor orientation

The SENSE T 4000 has a detection range of 4 meters.

## Setup in cooler trailers

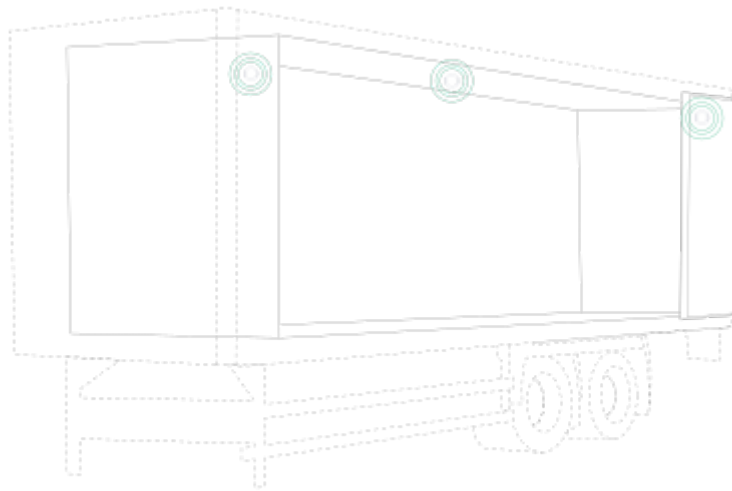

There are three recommended installation locations for cooler trailers:

Option	Location	Notes
Option 1	Back wall	Install the sensor on the back wall of the cooling truck.
Option 2	Ceiling	Install the sensor on the ceiling of the cooling truck. Make sure the sensor does not get damaged during (un)loading.
Option 3	Back door	Install the sensor on the back door of the truck.