

## The tracker

- Make sure the tracker is not fully surrounded by metal parts, it blocks the signal.
- Protect the tracker by the cooler's shape if possible.
- Do not install the tracker on the inside of the truck.
- Place the tracker as high as possible with a clear view on the sky.

## The sensor

- Temperature sensors inside in the middle of the trailer on any place. Install only one sensor.
- Keep out of range of doors and moving parts
- Do not install the sensors in the pathway of loading and unloading the goods.

**⚠** Please keep in mind to use enough glue spread across the entire back surface. Install the sensor where you least likely will experience traffic in the back. If a sensor falls/knocks off it is possible they will remove it from the trailer while cleaning it, and we will not be able to find it back.

Use glue that is suited for low temperatures.

**Option 1**  
Install the sensor on the back wall of the cooling truck.

**Option 2**  
Install the sensor on the ceiling of the cooling truck. Make sure the sensor does not get smashed of while (un) loading the truck.

**Option 3**  
Install the sensor on the back door of the truck.

