


Content



2 M6 x 16 bolts

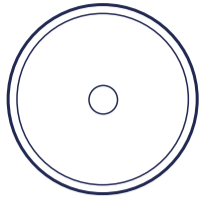

2 magnet with internal thread



2 washers

Instructions

Step 1



Place the tracker on the magnets.
Make sure the metal protection on the magnets is facing up.

Step 2



Line the washers on top of the tracker's mounting holes

Step 3



Tighten the screws on the magnets.