






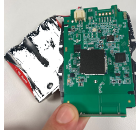






Battery change manual for trackers

Order these battery packs as replacements. See the [battery packs overview](#) to find the correct battery pack for your device.

Battery replacement should only be performed by trained personnel.
Dispose of old batteries according to local regulations.

Battery replacement procedure

 <p>Step 1: Make sure that the serial number and logo are facing the right way up. Then turn the tracker face down. Unscrew the 6 screws. Tip: If using a power drill, use power setting 7, on low.</p>	 <p>Step 2: Remove the back plate and the 6 screws.</p>	 <p>Step 3: Take the module (battery pack + battery holder + PCB) out of the casing. You might need to tilt the casing a bit.</p>	 <p>Step 4: Turn around the module (battery pack + battery holder + PCB) so the PCB is on top.</p>
 <p>Step 5: Lift the module and move the battery pack from the insert to the side.</p>	 <p>Step 6: Align the battery pack next to the PCB and insert.</p>	 <p>Step 7: Disconnect the battery pack from the PCB. Be careful when disconnecting the battery pack.</p>	 <p>Step 8: Connect the new battery pack to the PCB. A green LED will flash for some seconds.</p>
 <p>Step 9: Move the battery pack back under the insert and PCB and flip the module.</p>	 <p>Step 10: Align the battery pack onto the insert.</p>	 <p>Step 11: Place the module in the tracker. Use the alignment marks on the casing. Do not use force. There is only one way to put the module back in the tracker.</p>	 <p>Step 12: Close the tracker carefully. Your tracker is ready to use again.</p>

Indicate battery replaced in platform

After replacing the battery in the tracker, indicate this in the platform to reset the battery information.

Go to the tracker details page in the general section. You can search for the tracker or find it in the asset list or asset map. Click on the settings button on the far right. Navigate to the Battery tab. Click Replace battery and confirm the action. This will reset all battery information.

Battery replacements

In the table below you find which battery pack you need to order for replacement.

Battery change manual for trackers

Device	Replacement battery pack
SNT2	BAT 8202
SNT3 ULTRA/TRACK 1000/TRACK 1001	BAT 8201
TRACK 1100/TRACK 1140/TRACK 1000 MK2	BAT 8205
TRACK 1101/TRACK 1141	BAT 8206
TRACK 1210	BAT 8207
ZA 3510	BAT 8207
ZA 3505	BAT 8205
TRACK 1105/TRACK 1215/ZA 3515	BAT 8209